



Ventilation is regulated at the front of the fireplace.

As soon as the heating is switched on, hot air is blown out of the grids.

Additional ventilation grids are not required for built in situations.

All repair work can be carried out via the front of the fireplace.